


1

1. Connect PAM-E4 and Internet via one of these options

• Ethernet

• Modem/NRT

• LTE

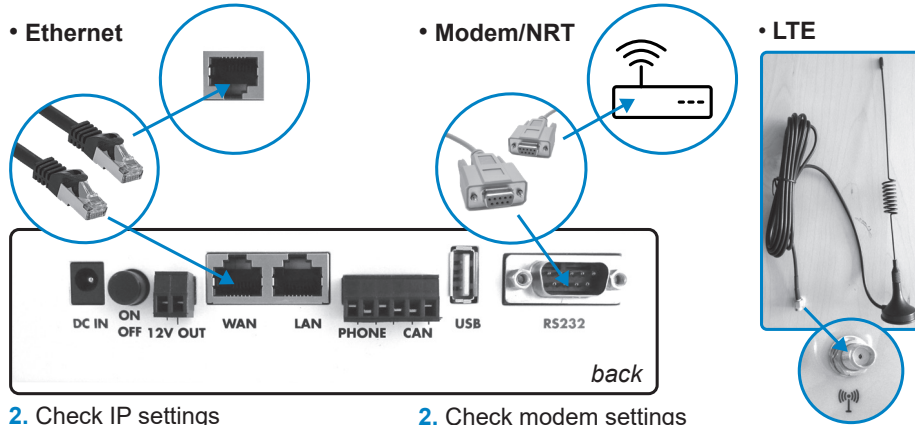

2. Check IP settings

2. Check modem settings

2

1. Set FST IP settings:

```
HAUPTMENUE  ↓
Service    >
Antrieb    >
>Konfig    >
```

```
Konfig      ↑
Modem/PC/Elevisio>
E/A Konfiguration >
>IP Konfiguration >
```

```
IP Konfiguration ↓
>IP Freigabe
IP Adresse
Subnetzmaske
```

```
IP Freigabe
Ja
```

```
IP Adresse
192.168.007.010
```

```
Subnetzmaske
255.255.255.0
```

```
Standardgateway
192.168.168.254
```

```
Server IP-Adresse
192.168.007.002
```

```
Portnummer
8002
```

2. Connect FST and PAM-E4 via

Ethernet (FST Version >= V2.000-0152)


or

RS232 (FST Version < V2.000-0152)

3

1. Connect PAM-E4 to main power (24 VDC)

2. Push Power Button

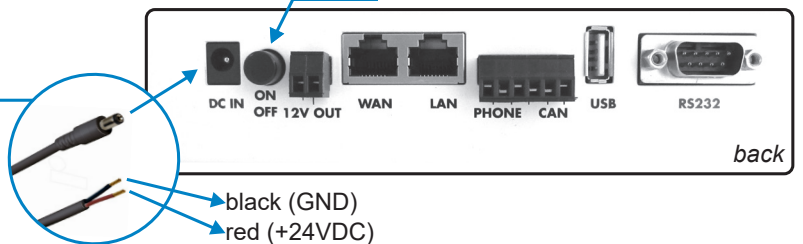

⚠ Risk of damage - Observe Polarity!

4

1. Check signals

